User Guide
Guía de Uso

DC222

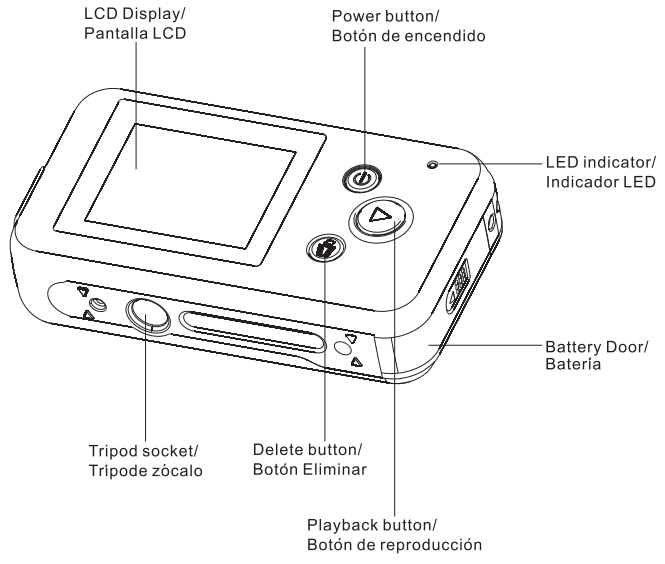

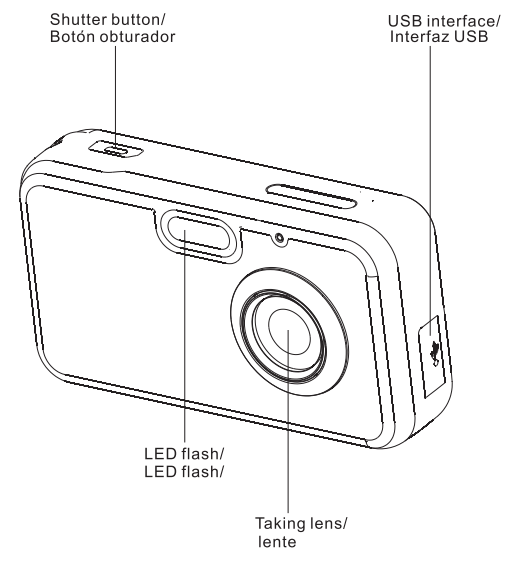

English

Getting Started

1. Open the battery door as show in the illustration.
2. Load the batteries in the correct orientation as shown in the illustration.
3. Close the battery door and make sure it is locked securely.

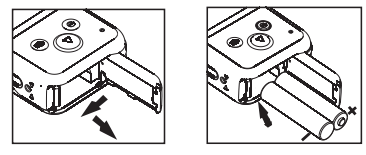

Inserting a SD/SDHC Memory Card(Optional)

1. This camera has no internal memory, you can expand your camera's memory by loading a SD/SDHC memory card (up to 8GB)
2. Be sure to format the memory card with this camera before its initial usage in your computer.

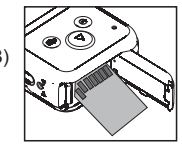

Capturing Image

Your camera is equipped with a 1.8" TFT LCD display to help you preview images and playback recorded images/video clips.

1. Press and hold the power button to turn the camera on.
2. Press the SHUTTER button to capture your image.

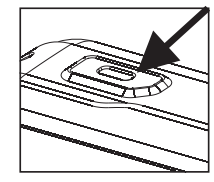

Playing Back

1. Press and hold the power button to turn the camera on.
2. Quickpress the Power button to toggle between modes (Video & Still).
3. Press the Playback button, the last image/video appears on the screen.
4. Press the Playback button to see the next image or video.
5. If you are reviewing videos, press the Shutter button to playback your video.
6. Quickpress the Power button to switch back to capture mode.

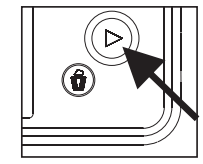

Erasing Images

1. Press the power button to turn the power on.
2. Press Playback button.
3. Press the delete button.
4. The next screen will allow you to choose "Single" or "All" by using the Playback button.
5. Pressing the shutter button will delete your image(s)/video(s). To go back, press the Power button.

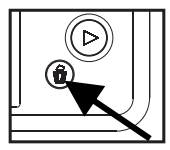

Transferring Files to Your Computer

System Requirements

WINDOWS	MACINTOSH
1. Intel PIII 677 or equivalent.	1. 10.4 or Later.
2. Windows 2000/XP/vista.	2. CD-ROM drive
3. 128MB RAM	3. Available USB port
4. 500MBavailable hard disk Space.	
5. CD-ROM drive.	
6. Available USB port.	

Downloading Your Files

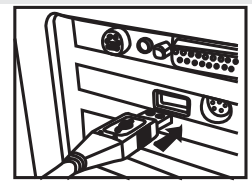

1. Connect one end of the USB cable to an available USB port on your computer.
2. Connect the other end of the USB cable to the USB terminal on the camera.
3. Press the Power button to turn the power on.
4. From the Windows desktop , double click on “My Computer”
5. Look for a new “Removable disk” icon
6. Double click on the removable disk and locate the DCIM folder
7. Copy & paste or Drag-N-Drop image and video files to a folder on your computer.

Should you have any questions or problems concerning this product, please contact our customer service department at:
Customer Support
www.southerntelecom.com
☎1-877-768-8483 (Toll Free)
Monday - Thursday: 9AM - 5PM (EST)
Friday: 9AM - 3PM (EST)

Spanish

Incio

1. Abrir la puerta de la bater í a como se muestra en la ilustraci ó n.
2. Cargue las bater í as como con la orientaci ó n correcta muestra.
3. Cerrar la puerta de la bater í a y aseg ú rese de que est á bloqueado segura.

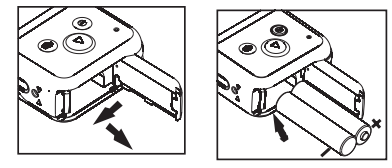

Inserci ó n de una tarjeta SD / SDHC tarjeta de memoria (opcional).

■ puede ampliar la memoria de su c á mara de carga una tarjeta SD / SDHC tarjeta de memoria (Se recomienda el uso de una tarjeta SD hasta 8 GB y hasta 8 GB para una SDHC).

■ Aseg ú rese de formatear la tarjeta de memoria con esta c á mara antes de su uso inicial. V é ase la p á gina 15 de la gu í a del usuario para aprender c ó mo dar formato a su tarjeta SD.

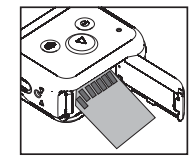

Spanish

Captura de im á genes

Su c á mara est á equipada con un 1.8” TFT LCD para ayudarle a com–plantean im á genes, reproducci ó n de im á genes y v í deo clips o ajustar la configuraci ó n del men ú .

1. Pulse el bot ó n de encendido para encender la c á mara.
2. Pulse el bot ó n del obturador para capturar la Imagen.

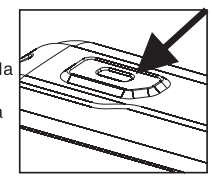

Reproducir im á genes instant á neas

Pulse el bot ó n de encendido para encender la c á mara.

1. Pulse el bot ó n de reproducci ó n
   ■ La ú ltima imagen en la pantalla.
2. Las im á genes se pueden visualizar en retroceso o avance de secuencias con los botones Bot ó n de reproducci ó n.

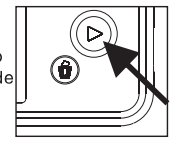

Spanish

Borrar una ú nica imagen

Pulse el bot ó n de encendido para encender la c á mara.

1. Pulse el bot ó n de reproducci ó n.
   ■ La ú ltima imagen se mostrar á en la pantalla.
2. Seleccione la imagen que desea borrar con los Botones <>.
3. Pulse el Bot ó n Eliminar.
4. Pulse el bot ó n obturador.

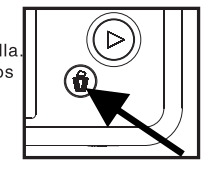

Transferir Archivos Al Equipo

WINDOWS	MACINTOSH
■Pentium III 677 o equivalente	■ OS 10.4 o posterior
■ Windows 2000/XP/Vista	■ Unidad de CD-ROM
■ 128 MB de RAM	■ Puerto USB disponible
■ 500 MB espacio disponible en Disco duro	
■ Unidad de CD-ROM	
■ Puerto USB disponible	

Spanish

Descarga de archivos

1. Conecte un extremo del cable USB a un puerto USB disponible en su ordenador.
2. Conecte el otro extremo del cable USB al terminal USB de la c á mara.
3. Pulse el bot ó n de encendido para encender la c á mara.
4. Desde el escritorio de Windows, haga doble clic en "Mi PC".
5. Puedes buscar un nuevo icono "Disco extra í ble".
6. Haga doble clic en el disco extra í ble y localice la carpeta DCIM.
7. Copiar y pegar o arrastrar–N–Gota de im á genes y archivos de v í deo a una carpeta en su computadora.